
RAAL 70-20XR standard connections

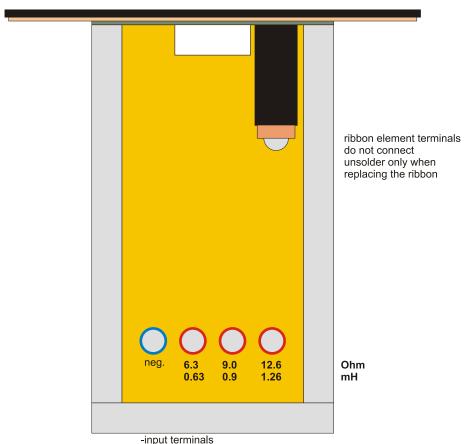

- -connect only between negative and one of the three positive terminals.
- -it is not necessary to push the lead wire into the hole. Just lay the wire down across the terminal and wet with solder.